 


FRUIT CRUSHER


Please ensure that you have received all the items listed below:

- Crusher body (1).
- Hopper (1).
- Hand crank (1).

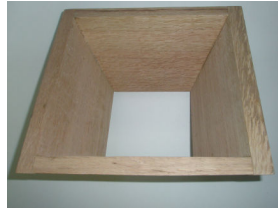

Before Using

- Assemble the crank unit, as per picture. First put nut then screw handle then with a wrench (3/4" or #19) tight the nut to the handle.

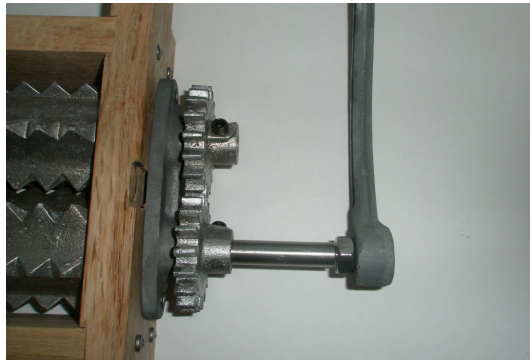



- Please check unit, and make sure rollers are moving freely. If not, check troubleshooting section
- Sanitize unit prior to use it

Important Precautions

1. Keep hands and loose articles away from rollers and gears at all times.
2. Keep unit away from children.
3. Do not immerse unit in water.
4. Do not store in direct sun.
5. Never dismantle unit.
6. **Hand crank only.**
7. Thoroughly wash crusher when finished using, store crusher indoors if possible.

Maintenance

1. Clean unit after each use.
2. After using it, store unit in a dry place,
3. From time to time hand-tighten the screws of the unit.
4. After each use. Lubricate outside of unit with household oil (WD-40 or similar). See pictures for places that require lubricant. Do not lubricate rollers themselves.

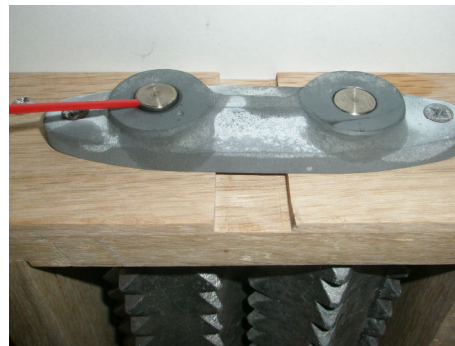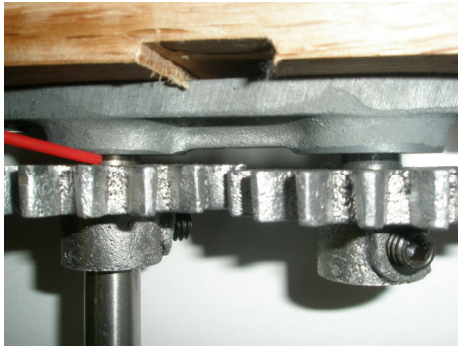

TROUBLESHOOTING

1. Rollers hit one another when crushing, and the unit stops working. Please check video on our website on how to fix this.
<http://www.thevintageshop.ca/allproducts/fruitcrusher01.html>
2. To back up the unit when crushing, you will need a wrench (3/4" or #19). Back up the unit from the nut (The handle will unthread from shaft if you back up using it).